



- 1. Right Front Turn Signal
- 2. Flashing Light
- 3. Rev Counter
- 4. High Beam Light
- 5. Seeing Neutral
- 6. Counter
- 7. Flashing Light
- 8. Headlight
- 9. Position Light
- 10. Key Switch
- 11. Left Frong Turn Signal
- 12. Left Handlebar Controls
- 13. Coils
- 14. Front Sensor Cyl. 1
- 15. Low Cyl. Sensor 2
- 16. Rear Cylinder Sensor 3
- 17. Left Spark Plug
- 18. Center Spark Plug
- 19. Right Spark Plug
- 20. Right Ignition Box

- 21. Central Ignition Box
- 22. Left Ignition Box
- 23. Fuse Box
- 24. Regulator - Rectifier
- 25. Left Rear Turn Signal
- 26. Rear Taillight
- 27. Right Rear Turn Signal
- 28. Battery
- 29. Starter Relay
- 30. Starter
- 31. Alternator
- 32. Rear Stop Switch
- 33. Oil Temperature Switch
- 34. Turn Signal Flasher
- 35. Neutral Switch
- 36. Horns
- 37. Front Stop Switch
- 38. Right Handlebar Controls
- 39. Fuel Gauge Float