

1946 Superalce

31 January 2014

Legend

- 1. Charge indicator (6V 3W)
- 2. Ignition switch
- 3. Light switch
- 4. City light (6V 5W)
- 5. Headlight (6V 25/25W)
- 6. Hi/Low beam switch
- 7. Horn button
- 8. Terminal block
- 9. Fuse (8 A)
- 10. Dynamo
- 11. Battery
- 12. Tail light (6V 5W)
- 13. Horn

