



LEGEND

1. Headlight
2. High and low beam lamp (45/40W - 12V)
3. Terminal block with fuses
4. Distribution block in headlight
5. Fuse for horn and additional light
6. Switch for additional light
7. Switch for amber flashers
8. Red warning lamp for front red lights (bulb 3W - 12V)
9. Blue warning lamp for amber rear lamps (bulb 3W - 12V)
10. Green warning lamp for L/H flasher (bulb 3W - 12V)
11. Green warning lamp for R/H flasher (bulb 3W - 12V)
12. Instrument panel
13. Front distributing block
14. Speedometer
15. Speedometer illumination lamp (3W - 12V)
16. Red warning light for high beam (bulb 3W - 12V)
17. Red oil pressure indicator (bulb 3W - 12V)
18. Amber neutral indicator lamp (bulb 3W - 12V)
19. Red indicator light for insufficient battery charge
20. Ignition switch
21. Generator
22. Regulator
23. Battery
24. Starter motor relay
25. Starter motor
26. Distributor
27. Contact breaker
28. H.T coil
29. Spark plug
30. Light switch and horn button
31. Front side red lights switch
32. Turn signal flashing lamps switch
33. Start button
34. Turn signal flasher (28W - 12V)
35. Amber rear lights flasher (40W - 12V)
36. Horn
37. Stop light switch, rear brake
38. Oil pressure switch
39. Neutral indicator switch
40. Rear distributing block
41. Number plate and stop light (5/20W - 12V)
42. R/H rear light amber flasher (bulb 5/20W - 12V)
43. L/H rear light amber flasher (bulb 5/20W - 12V)
44. R/H rear light, blue (bulb 5W - 12V)
45. L/H rear light, blue (bulb 5W - 12V)
46. R/H red front light (bulb 5W - 12V)
47. L/H red front light (bulb 5W - 12V)
48. R/H amber turn indicator (bulb 5W - 12V)
49. L/H amber turn indicator (bulb 5W - 12V)
50. Additional light for police duties (bulb 5W - 12V)
51. Stop light switch, front brake

IGNITION SWITCH POSITION

- 0 -
- 1 - 30/30 Int.
- 2 - 30/20 Int. 15/54
- 3 - Not applicable for system incorporating starter button