



- 1. Tachometer 3W
- 2. Rev-counter 3W
- 3. High beam warning light 1.2W
- 4. Oil pressure warning light 1.2W
- 5. Neutral position warning light 1.2W
- 6. Parking light indicator 1.2 W
- 7. Generator charge warning light 1.2 W
- 8. Low beam 40W
- 9. High beam 45W
- 10. Turn signal indicator, front, right 21W
- 11. Turn signal indicator, front, left 21W
- 12. Engine starting and stopping device
- 13. Control: turn indicator lights, horns, flashing light 7 A
- 15. Horns
- 16. Front brake switch
- 17. Flashing light relay (flash)
- 18. Rear brake switch
- 19. Battery
- 20. Regulator
- 21. Rectifier
- 22. Alternator
- 23. Starter motor relay
- 24. Starter motor
- 25. Turn indicator light, rear left 21W
- 26. Rear stop light 21W/21W
- 27. Number plate light 5W/5W
- 28. Turn indicator light, rear, right 21W
- 29. Turn indicator lights, flasher unit
- 30. Oil pressure switch
- 31. Neutral position cutout
- 32. Terminal block with fuses 16 A fuses
- 33. Contact breaker
- 34. Coils
- 35. Ignition switch 3 positions
- 36. Spark plugs
- 37. Parking light, front 4W
- 38. Brake fluid level warning light 1.2"
- 39. Brake fluid level indicator
- 40. Turn signal lights bracket
- 41. Voltmeter 3W
- 42. Clock 3W
- 43. Turn light warning light, left 1.2W
- 44. Turn light warning light, right 1.2W
- 45. 4-way connector
- 46. 3-way connector
- 47. Switch, simultaneous flashing lights