


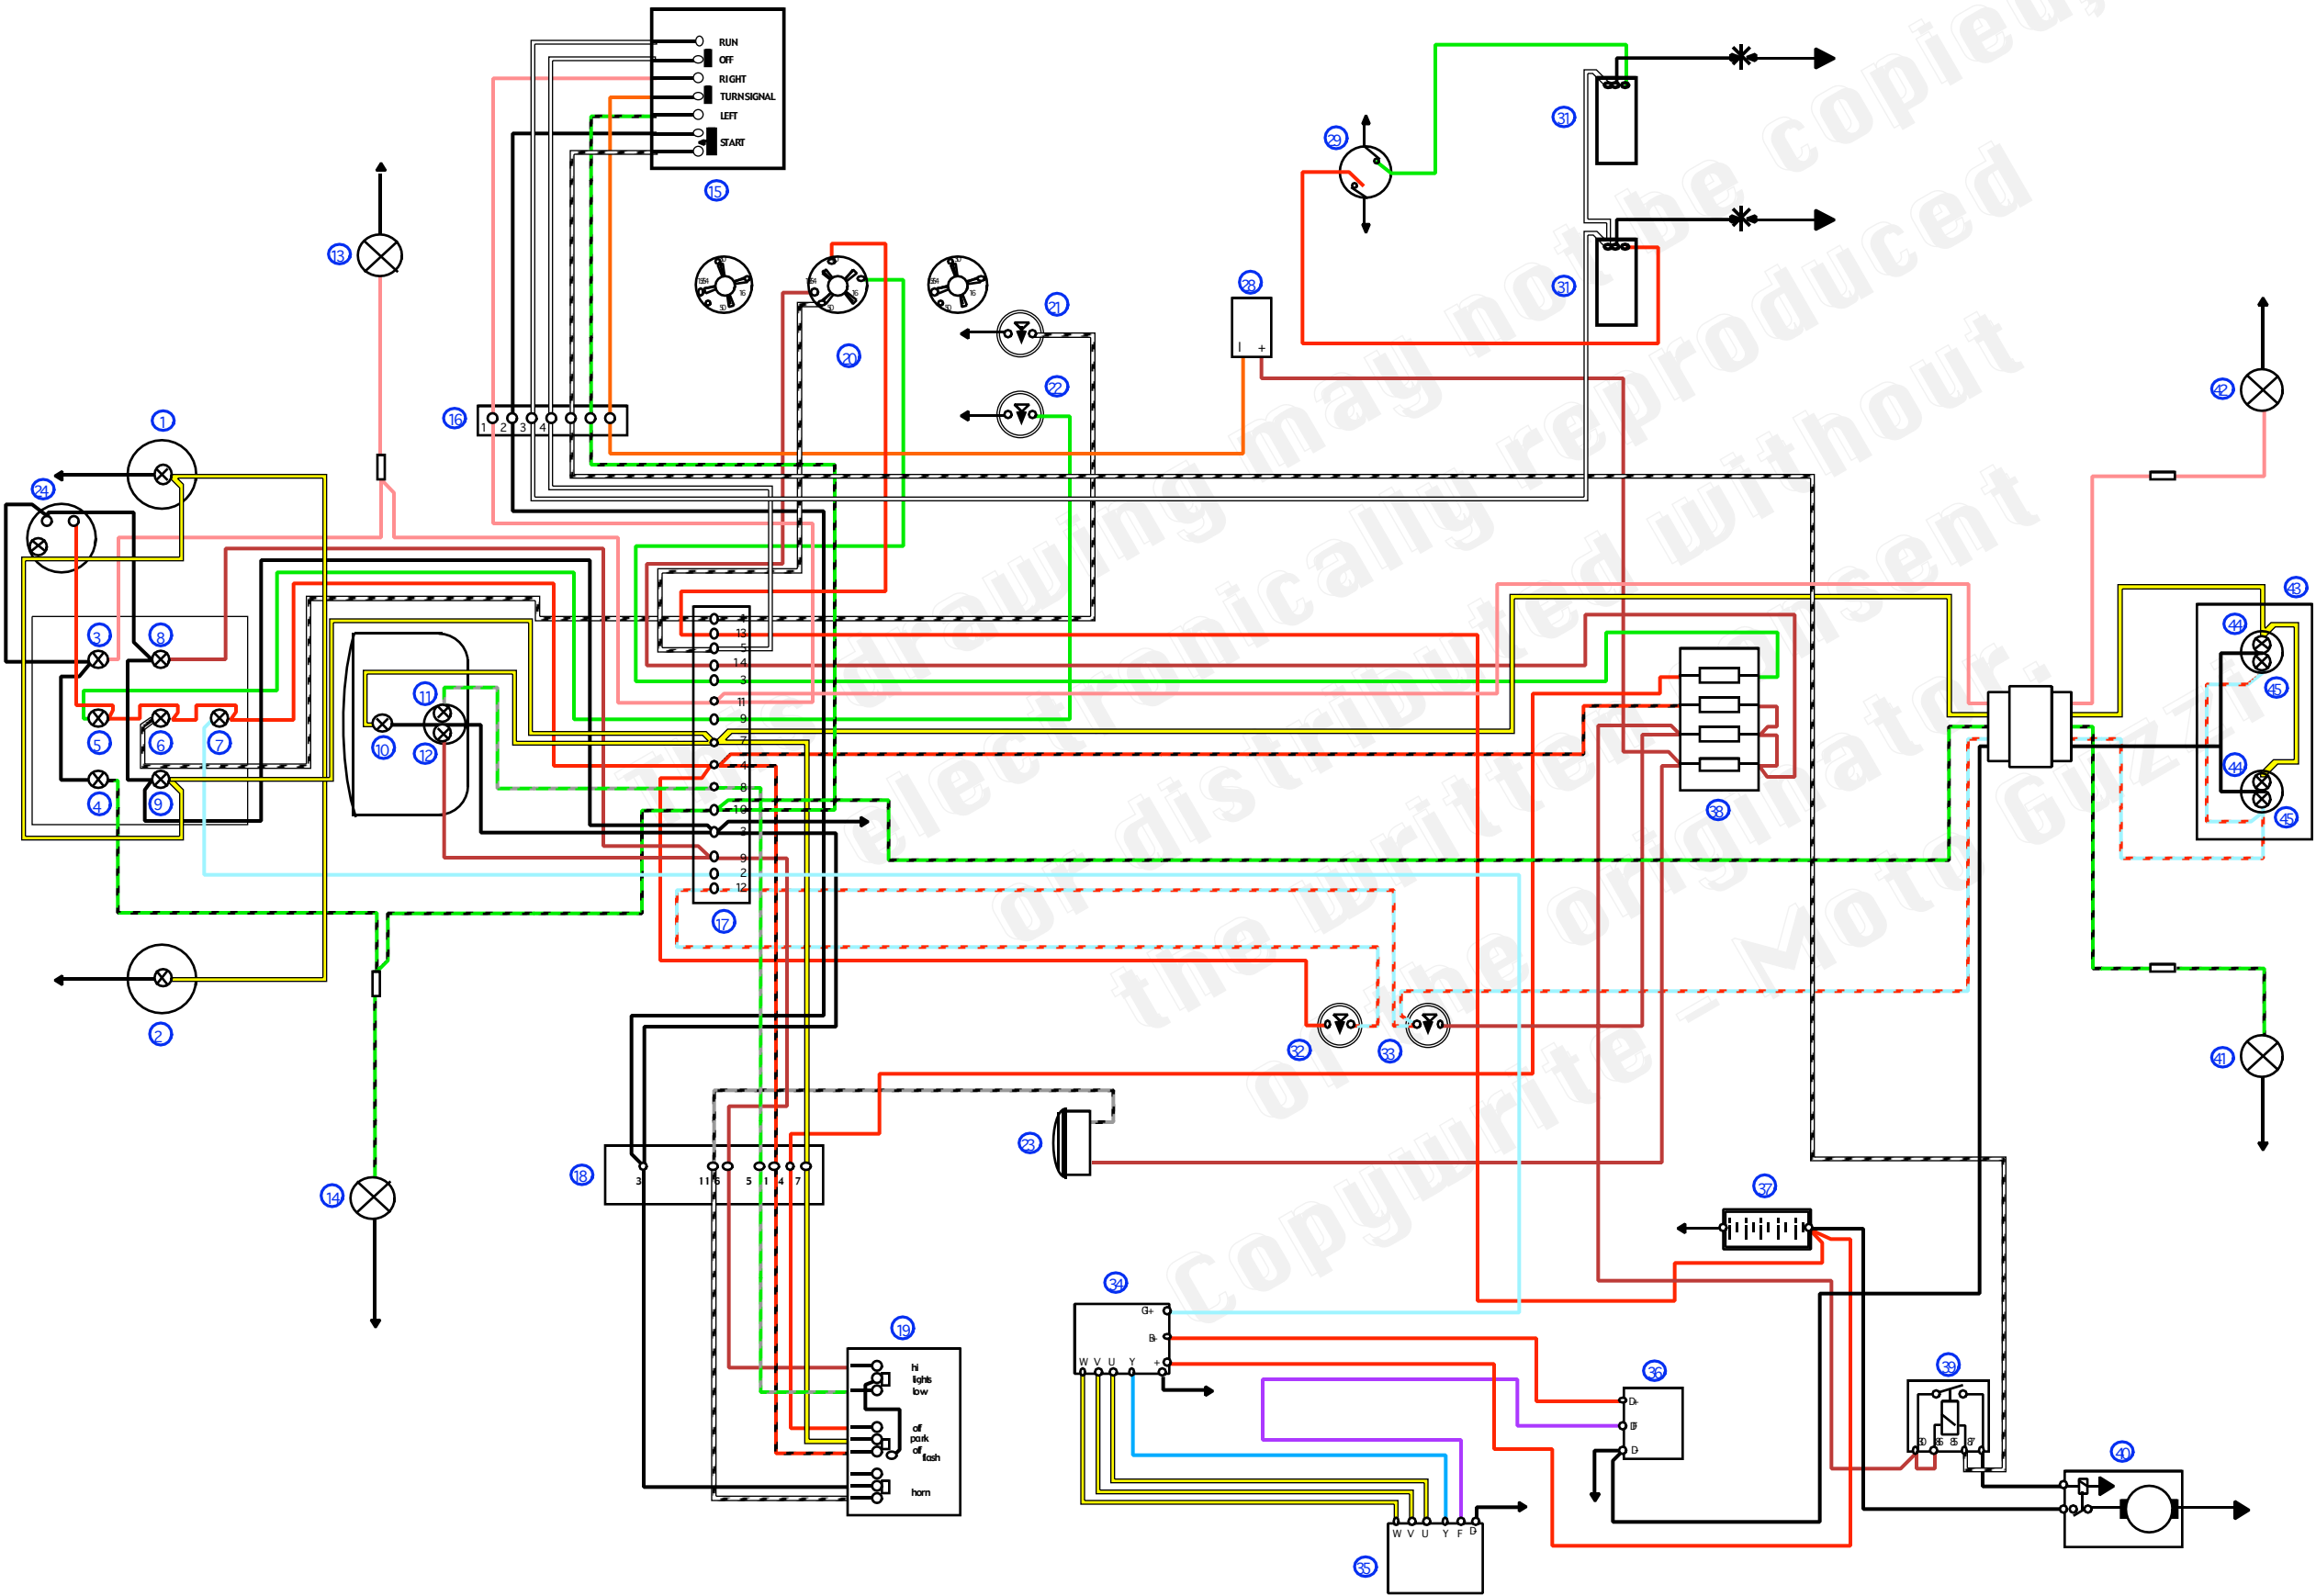

- 1. Tachometer (3W)
- 2. Speedometer (3W)
- 3. R/H turn signal indicator (1.2W)
- 4. L/H turn signal indicator (1.2W)
- 5. Neutral indicator (1.2W)
- 6. Oil pressure indicator (1.2W)
- 7. Generator indicator (1.2W)
- 8. High beam indicator (1.2W)
- 9. Lights indicator (1.2W)
- 10. Front parking light (bulb 4W - 12V)
- 11. High beam (40W)
- 12. Lowbeam (45W)
- 13. R/H front turn signal (21W)
- 14. L/H front turn signal (21W)
- 15. Controls: turn signals, run/ stop, starter motor
- 16. Connector 9-way
- 17. Connector 15-way
- 18. Connector 9-way
- 19. Controls: horn, lights, hi/lo beam
- 20. Ignition switch
- 21. Oil pressure switch
- 22. Neutral position switch
- 23. Horn
- 24. Voltmeter (3W)
- 28. Flasher
- 29. Rotor
- 31. Ignition coils
- 32. Front brake light switch
- 33. Rear brake light switch
- 34. Rectifier
- 35. Alternator
- 36. Regulator
- 37. Battery
- 38. Fuse block (16A)
- 39. Starter relay
- 40. Starter motor
- 41. L/H rear turn signal (21W)
- 42. R/H rear turn signal (21W)
- 43. Tail light assembly
- 44. Brake light (21W + 21W)
- 45. Tail light (5W + 5W)
- 46. Connector 6-way

Fuses

- F1: Stop tight (rear brake),
Turn Signals.
- F2: Starting relay, stop light (front brake),
high beam flash relay, horn.
- F3: Warning lights generator, oil, neutral,
High beam warning, low beam.
- F4: Parking light - front and rear, instrument
lighting, warning light parking light.