


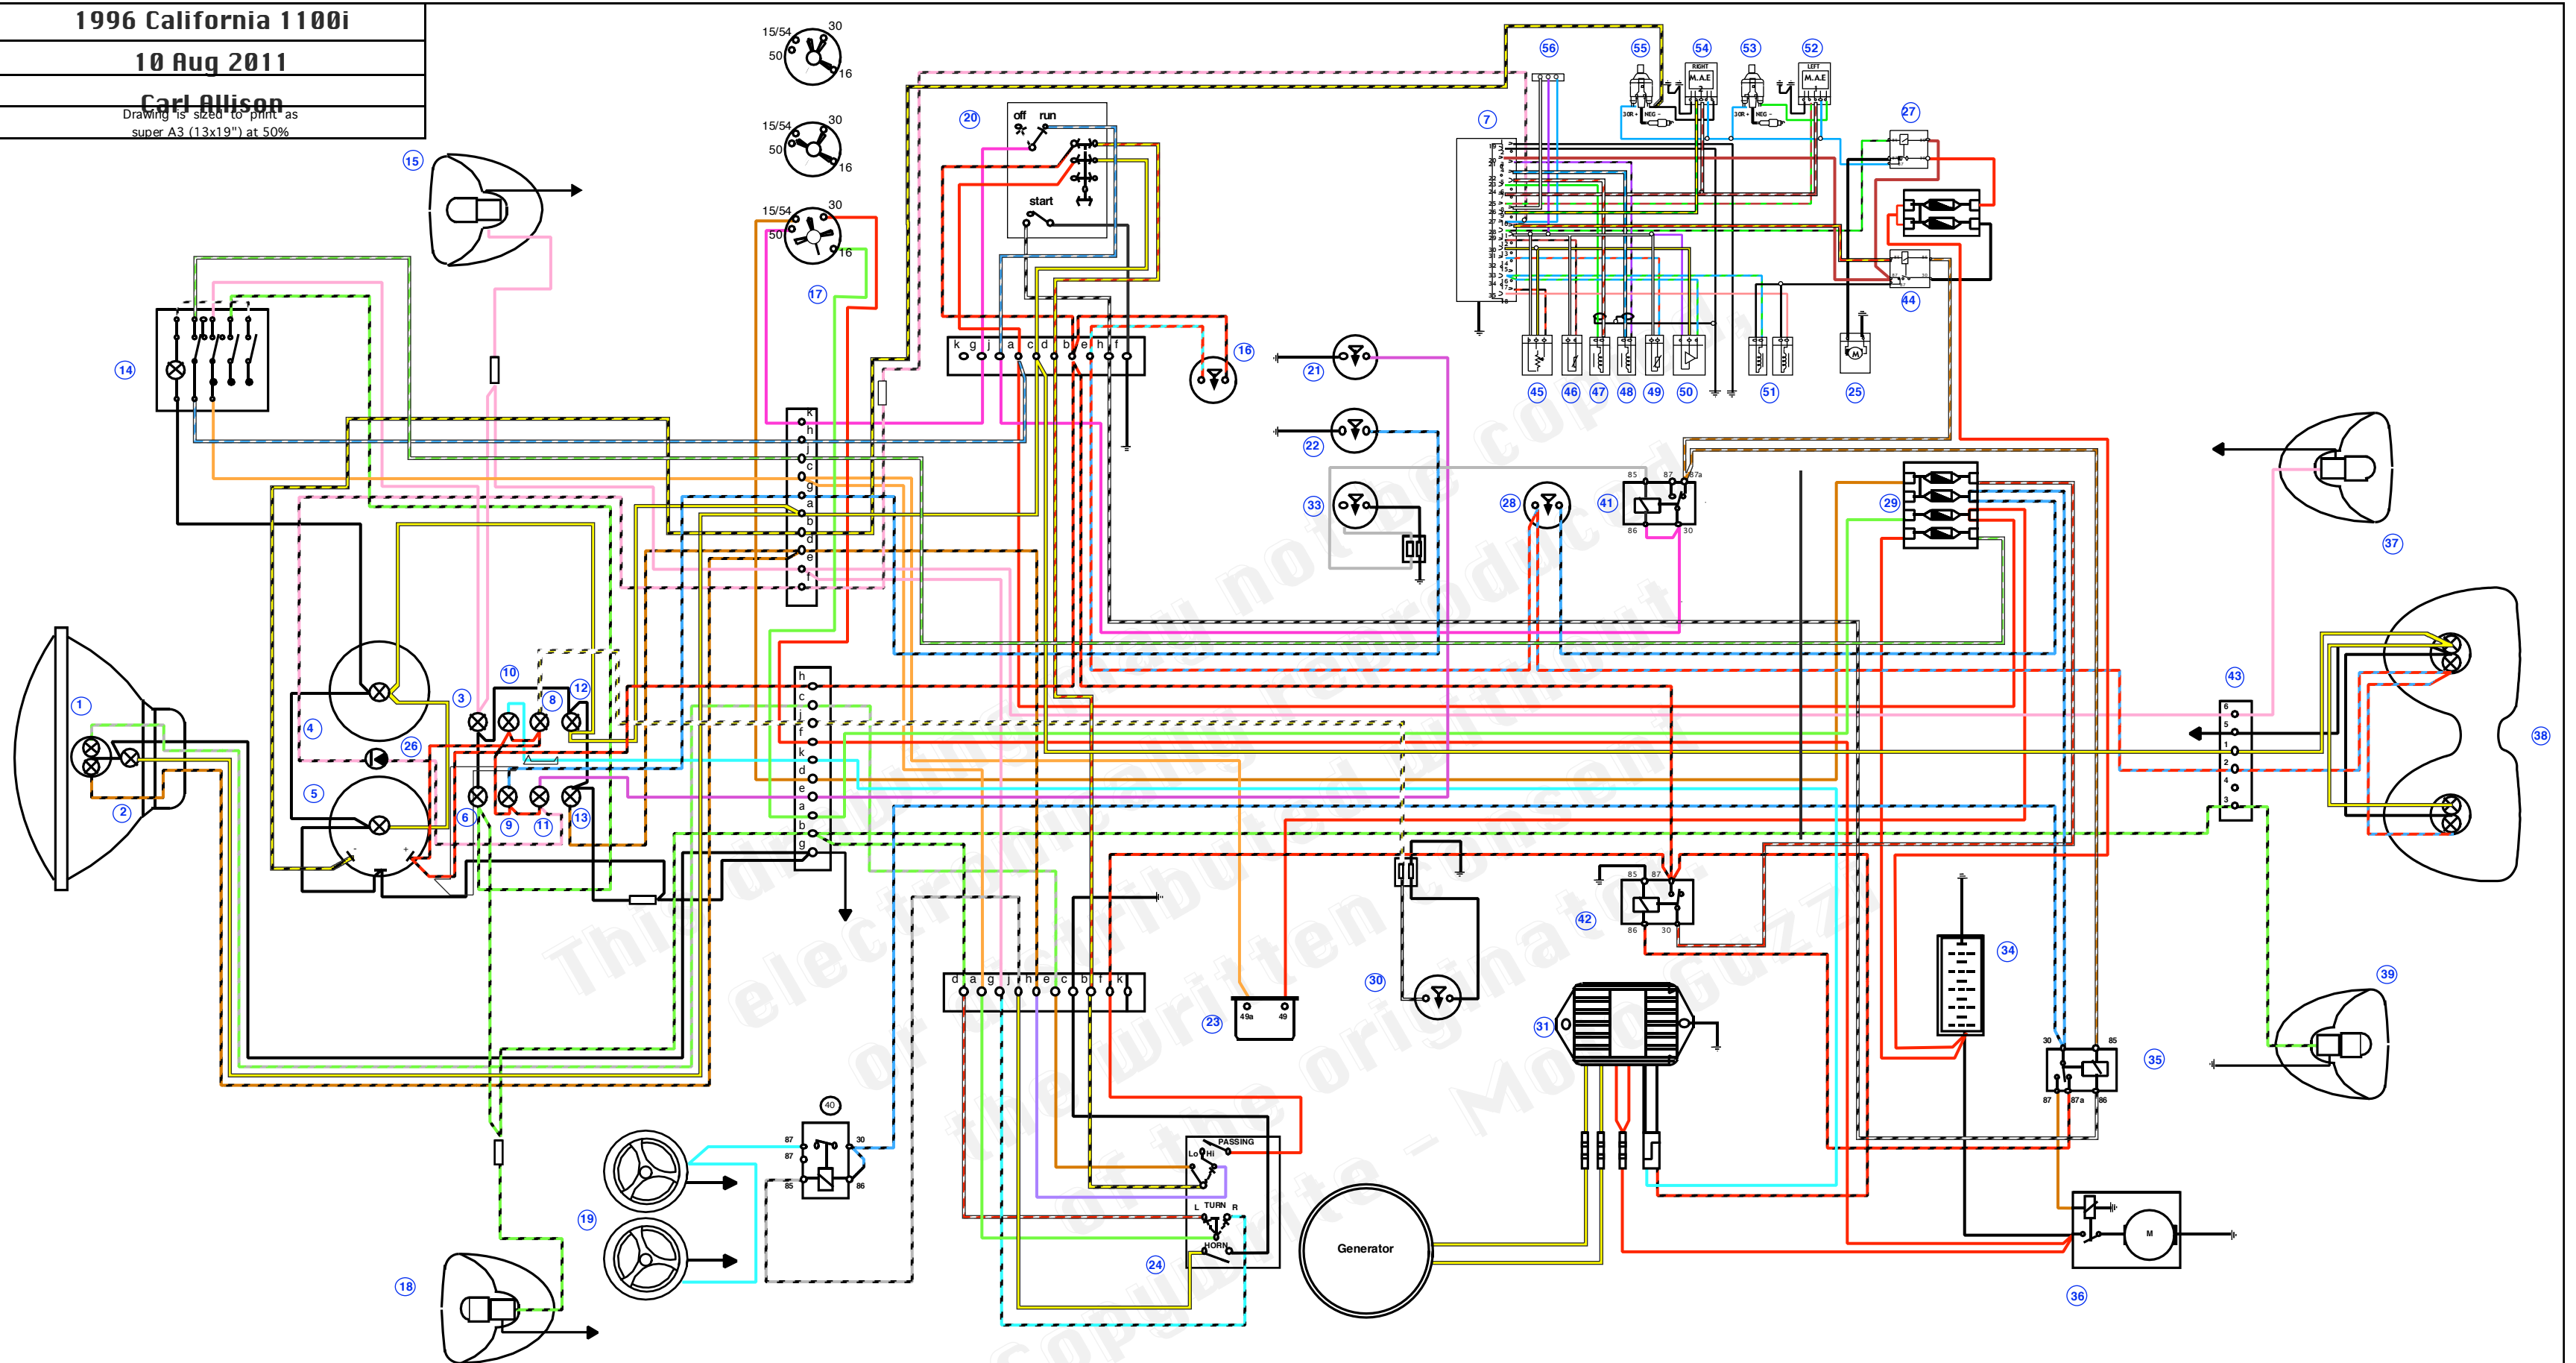

1. Bulb, main/dipped beam 60/56 W
2. Bulb, front sidelights 4W
3. Bulb, r/h direction indicator warning light
4. Bulb, speedometer light
5. Bulb, rev. counter light
6. Bulb, l/h direction indicator warning light.
7. Microprocessor control unit
8. Bulb, fuel level warning light
9. Bulb, oil pressure warning light
10. Bulb, generator warning light
11. Bulb, neutral warning light
12. Bulb, sidelight warning light

13. Bulb, main beam warning light
14. Emergency flasher switch
15. R/H front direction indicator
16. Front brake stop switch
17. Starter switch
18. L/H front direction indicator
19. Two-note horn
20. Control switch: start/stop engine
21. Neutral position switch
22. Oil pressure switch
23. Blinker unit (1 2V 46W)
24. Control switch: lights-horn-direction indicators

25. Fuel pump
26. Luminous diode (Check lamp)
27. Pump control relay
28. Rear brake stop switch
29. Fuse terminal board
30. Low fuel level warning sensor
31. Ac regulator 12Vdc 25 Amp jump (DUCATI)
32. Alternator (14V-25 Amp) (DUCATI)
33. Side stand microswitch
34. Battery 12V-30Ah
35. Starter solenoid
36. Starter motorc

37. R/H rear direction indicator
38. Bulb, number plate and stop light
39. L/H rear direction indicator
40. Two-note horn switch
41. Solenoid for side stand
42. Headlamp relay
43. Connector, 6-way Molex
44. Injectors and ECU control relay
45. Throttle potentiometer
46. Oil temperature sensor
47. Crankshaft position sensor
48. Motor revolution sensor

49. Air temperature sensor
50. Absolute pressure sensor
51. Injectors
52. Cyl. 1 electronic ignition module
53. Cyl. 1 ignition coil
54. Cyl. 2 electronic ignition module
55. Cyl. 2 ignition coil
56. Connector for IAW system diagnostic