

1996 Centauro

25 July 2013

Carl Allison


Drawing is sized to print as
super A3 (13x19") at 50%

Wiring Color Codes

	yellow
	pink
	red
	brown
	orange
	violet
	blue
	light blue
	green
	grey
	white/black
	yellow/white
	red/white
	brown/white
	blue/white
	green/white
	grey/red
	grey/green
	red/yellow
	yellow/black

Ignition Switch

	green	orange	yellow	pink
P				
LOCK				
OFF				
ON				

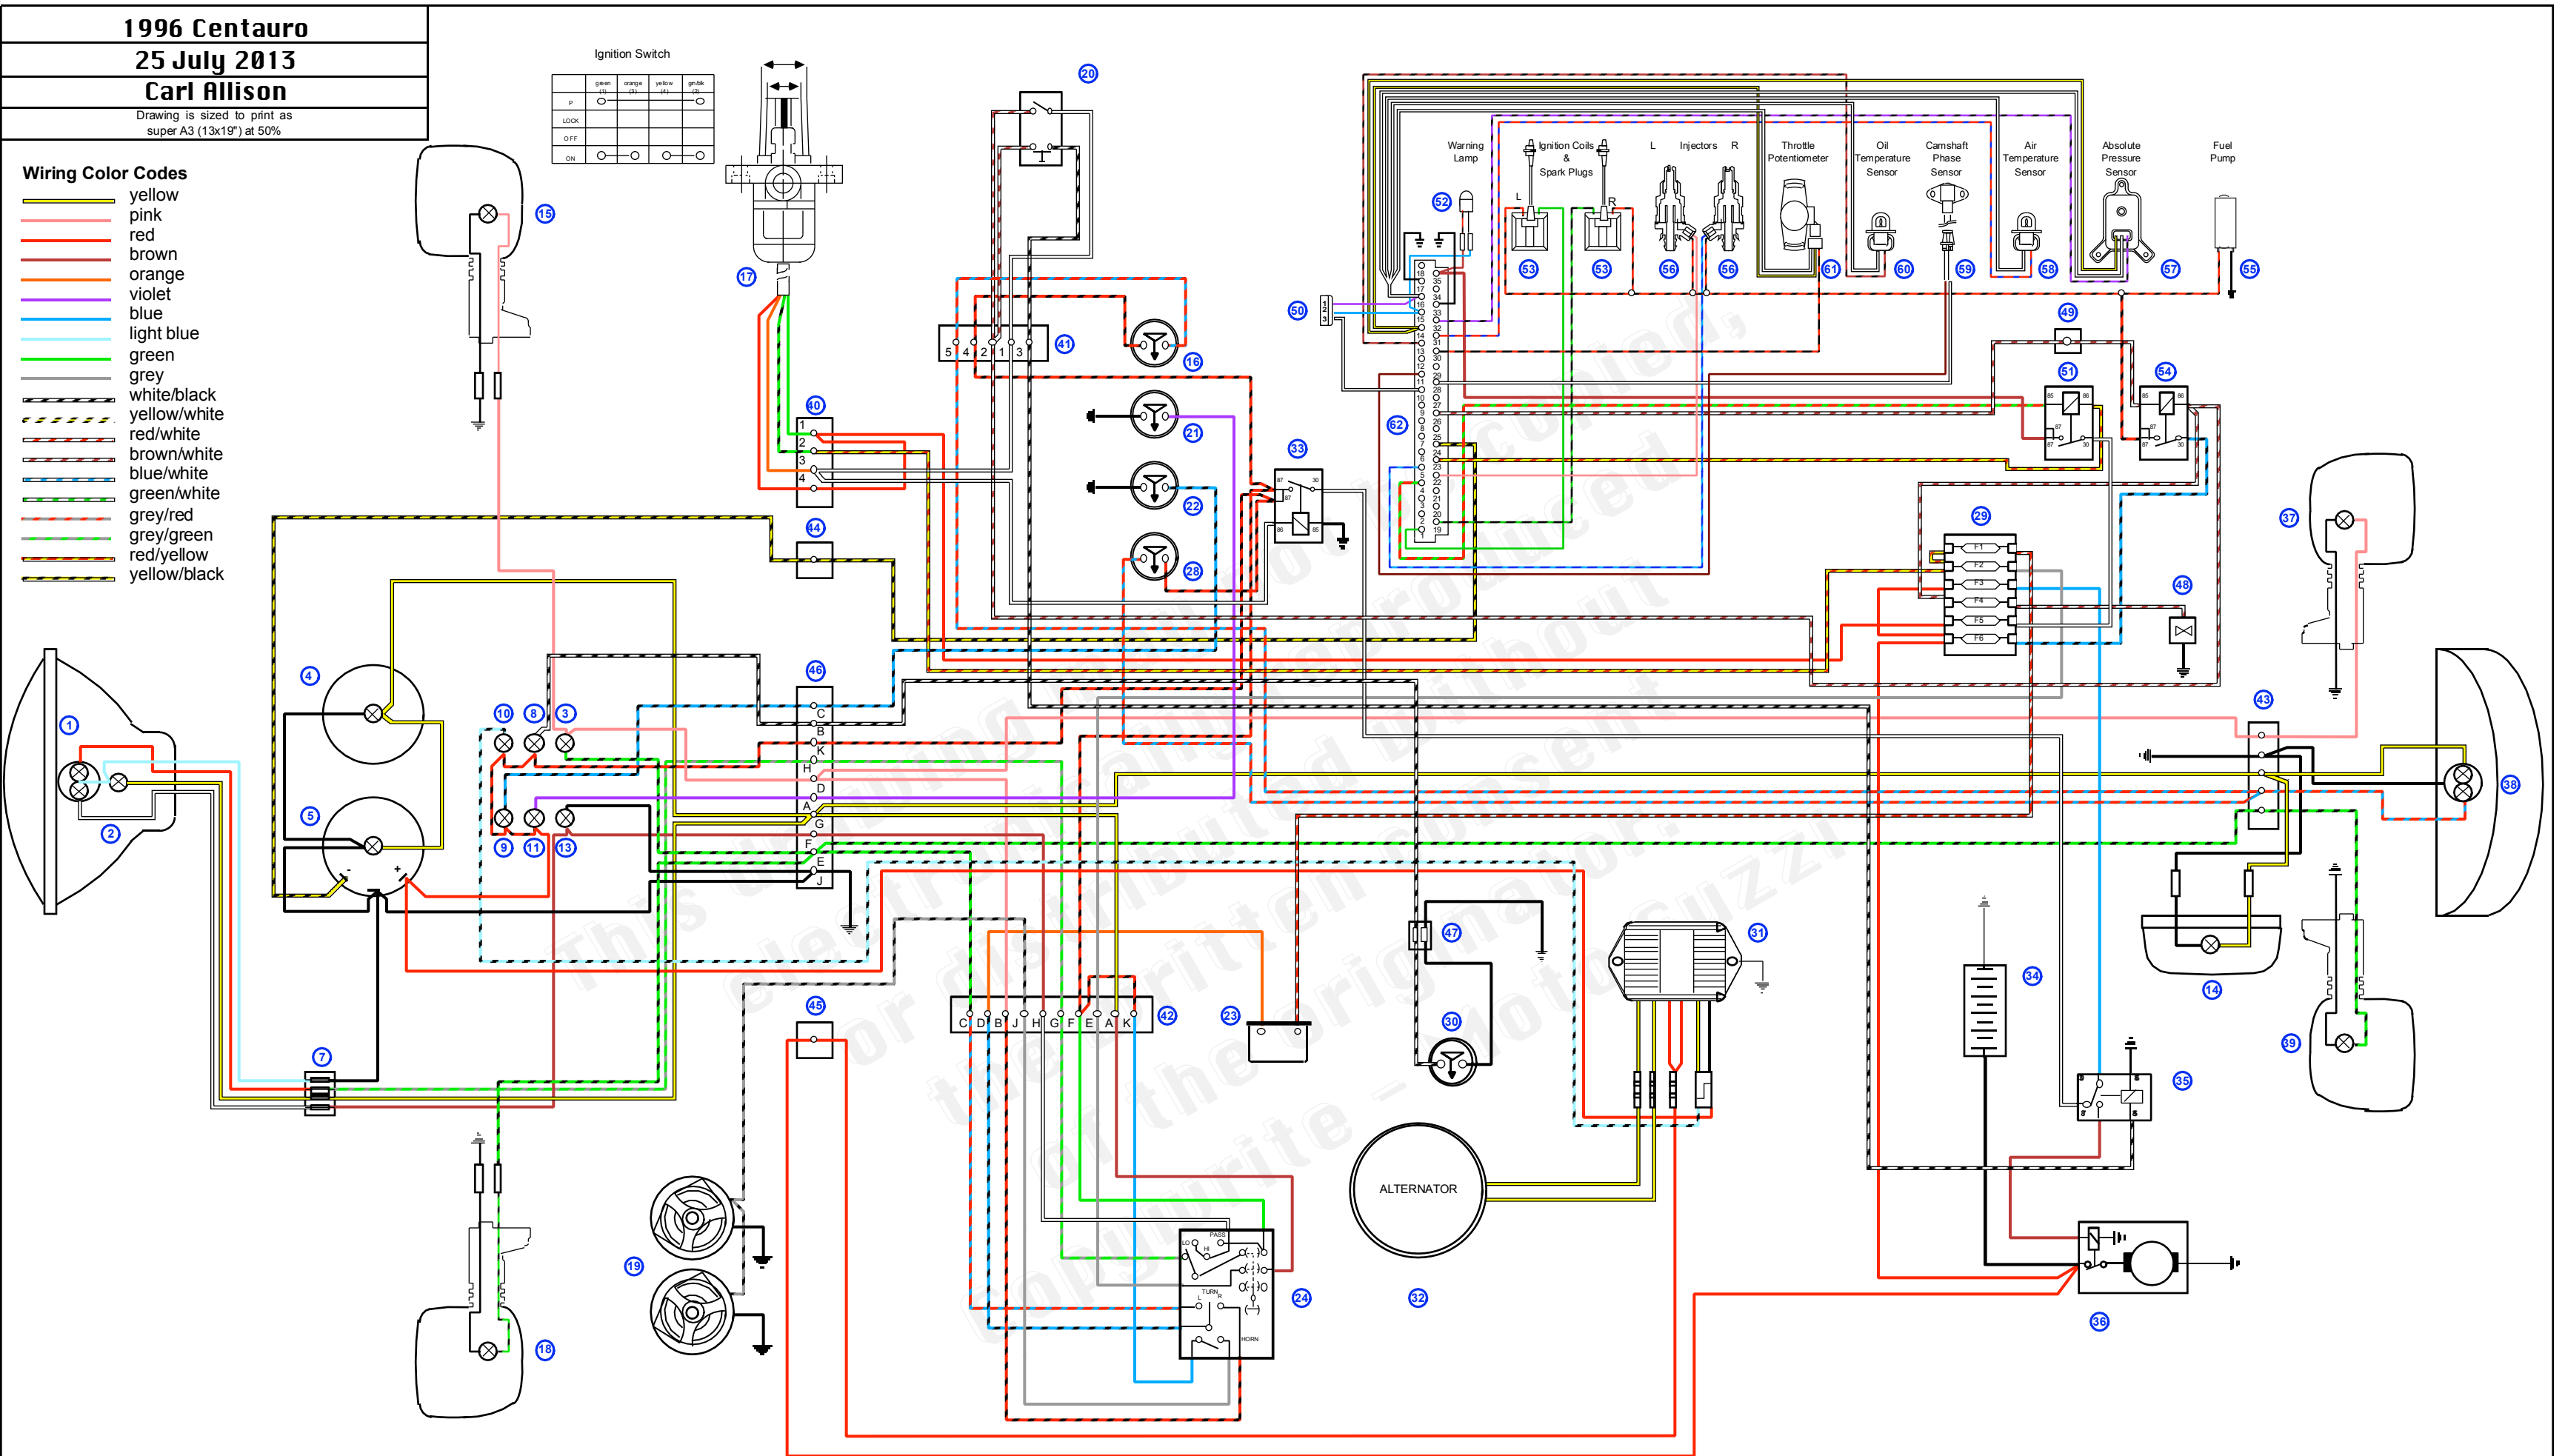

1. Bulb, main/dipped beam 60/55 W
2. Bulb, front sidelights 4 W
3. Bulb, r/h and l/h direction indicator warning light
4. Bulb, speedometer light
5. Bulb, tachometer
8. Bulb, fuel level warning light
9. Bulb, oil pressure warning light
10. Bulb, generator warning light
11. Bulb, neutral warning light
13. Bulb, main beam warning light
14. License plate light
15. R/h front direction indicator
16. Front brake stop switch

17. Starter switch
18. L/h front direction indicator
19. Horns (H, L)
20. Control switch: start/stop engine, headlight selector
21. Neutral position switch
22. Oil pressure switch
23. Blinker unit (12V 46W)
24. Control switch: lights-horn-direction indicators
26. Rear brake stop switch
29. Fuse terminal board
30. Fuel level transmitter warning light
31. Regulator 12V dc 25 Amp jump (DUCATI)
32. Alternator 14V-25A (DUCATI)

33. Headlamp relay
34. Hawker battery series GENESIS 12V-12Ah
35. Starter solenoid
36. Starter motor
37. R/h rear direction indicator
38. Bulb, number plate and stop light
39. L/h rear direction indicator
40. AMP 4-way connector
41. AMP 5-way connector
42. PAKARD 10-way connector
43. AMP 5-way connector
44. AMP 1-way connector
45. PAKARD 1-way connector

45. PAKARD 1-way connector
46. AMP 16-way connector
47. AMP 2-way connector
48. Electric fuel tap
49. AMP 1-way connector
50. Diagnosis connector
51. ECU relay
52. WARNING lamp
53. Starting coil
54. Power relay (fuel pump, coils and injectors)
55. Fuel pump
56. Injectors
57. Absolute pressure sensor

58. Air temperature sensor
 59. Engine revolution sensor
 60. Oil temperature sensor (PAKARD)
 61. Throttle potentiometer (PAKARD)
 62. ECU unit
- List of Fuses (All 15A)
- F1. Turn signals
 - F2. High beam, low beam, flash
 - F3. Starter, instruments, brake light switches, brake lights
 - F4. Electric fuel tap
 - F5. ECU
 - F6. Pump, coils, injectors