

- Multiple Connectors
- Clutch Switch
- Ignition Relay
- High Beams Relay
- Low Beams Relay
- RH Switch Assembly (RU N/OFF/START/HAZARD)
- Navigator Connector
- Horn
- LH Switch Assembly
- Instrument Panel Air Temp. Thermistor
- Instrument Panel
- Immobilizer Antenna
- Ignition Switch
- Heated Handgrips
- ABS Switch.
- RH Rear Direction Indicator
- Tail Light (LED)
- LH Rear Direction Indicator
- Number Plate Light
- Rear Stop Switch
- Front Stop Switch
- ECU Diagnosis Connector
- Auxiliary Fuses
- Main Fuses
- Starter Motor
- Battery
- Power Outlet
- Generator
- Main Injection Relay
- Auxiliary Injection Relay
- Oil Pressure Gauge
- Neutral Switch
- Lambda Sensor
- Side Stand Switch
- Fuel Level Sensor
- Fuel Pump
- Intake Air Temp. Thermistor
- Head Temp. Thermistor
- Automatic Air
- Throttle Sensor
- RH Cyl. Inner Spark Plug
- RH Cyl. Outer Spark Plug
- LH Cyl. Inner Spark Plug
- LH Cyl. Outer Spark Plug
- RH Cylinder Twin Coil
- LH Cylinder Twin Coil
- RH Cyl. Injector
- LH Cyl. Injector
- N/A
- Bank Angle Sensor
- Pickup Sensor
- Pickup Cable Shield
- ECU
- LH Front Direction Indicator
- Parking Light Bulb (2)
- Low Beam Bulb
- High Beam Bulb (2)
- Headlight (2)
- RH Front Direction Indicator
- Instrument Panel Diag.
- Diode Pre-setting
- Condenser Pre-setting
- ABS Diag.
- ABS Control Unit
- Rear Wheel Speed Sensor
- Front Wheel Speed Sensor
- ABS Fuses
- Windshield Controls

