

Wiring Connections

1. Multiple connectors
2. Starter relay
3. Start-up maintenance relay
4. Clutch switch
5. Right light switch
6. Light logic relay
7. GPS Coupling
8. Horn
9. Left light switch
10. Air temperature sensor
11. Instrument panel
12. Instrument panel diagnosis
13. Key switch
14. Immobilizer aerial
15. Rear light turn indicator
16. Rear light assembly
17. Rear left turn indicator
18. License plate light bulb
19. Rear stop switch
20. Front stop switch
21. ECU diagnosis
22. Auxiliary fuses
23. Main fuses
24. Starter motor
25. Battery
26. -
27. Generator
28. Main injection relay
29. Secondary injection relay
30. Oil pressure sensor
31. Neutral sensor
32. Lambda Probe
33. Side stand switch
34. Fuel level sensor
35. Fuel pump
36. Intake air temperature sensor
37. Engine temperature sensor
38. Idle motor
39. Throttle position sensor
40. -
41. Right cylinder outer spark plug
42. -
43. Left cylinder outer spark plug
44. Right cylinder coil
45. Left cylinder coil
46. Right cylinder injector
47. Left cylinder injector
48. Vehicle speed sensor
49. Fall sensor
50. Pick up
51. Pick up wire shielding
52. ECU
53. Front left turn indicator
54. Tail light bulb
55. Low-beam/high-beam bulb
56. Headlamp assembly
57. Front right turn indicator

