



Electric system scheme legend

- 1. Headlight.
- 2. High and low beam (56/60 W bulb).
- 3. Parking light (4 W bulb).
- 4. 15-way connector (Molex).
- 5. 9-way connector (Molex).
- 6. 9-way connector (Molex).
- 7. 3-position ignition switch.
- 8. Voltmeter (3 W bulb).
- 9. Speedometer (3 W bulb).
- 10. Rev. counter (3 W bulb).
- 11. R.H. blinkers warn. light (1.2 W bulb).
- 12. Brake fluid level warn. light (1.2 W bulb).
- 13. Oil pressure warn. light (1.2 W bulb).
- 14. Generator warn. light (1.2 W bulb).
- 15. Neutral gear warn. light (1.2 W bulb).
- 16. Parking light warn. light (1.2 W bulb).
- 17. High beam warn. light (1.2 W bulb).
- 18. L. H. blinkers warn. light (1.2 W bulb).
- 19. Simultaneous flasher switching.
- 20. R. H. front direction indicator (21 W bulb)
- 21. L. H. front direction indicator (21 W bulb).
- 22. R. H. rear direction indicator (21 W bulb).
- 23. L. H. rear direction indicator (21 W bulb).
- 24. High and low beam control device - Light flashing - engine starting.
- 25. Horns device - Lights control switch and direction indicators.
- 26. Bi-tonal trumpets.
- 27. Front brake STOP switch.
- 28. Rear brake STOP switch.
- 29. Rectifier.
- 30. Alternator (14V20A21).
- 31. Regulator.
- 32. Battery.
- 33. Starting solenoid.
- 34. Start motor.
- 35. Fuse holder.
- 36. Rear STOP light.
- 37. Rear parking and number plate light.
- 38. Tail light.
- 39. Flashing device (12 V 42/92 W).
- 40. Brake fluid level signal.
- 41. Neutral pos. signal.
- 42. Oil pressure signal.
- 43. Coils.
- 44. Spark plugs.
- 45. Breaker.
- 46. Trumpet solenoid.
- 47. 80½-2W resistance.

- Fuse 1: Emergency blinkers light
- Fuse 2: Direction indicators
Parking lights
instrument cluster lights
parking light warn. light
- Fuse 3: High and low beam
front stop light switch
voltmeter
neutral position warning light
generator warning light
oil pressure warning light
brake fluid warning light
- Fuse 4: trumpet solenoid
- Fuse 5: Starting solenoid
rear stop light switch.